



# Instructions for the assembly and disassembly of the hood



Van Raam  
Guldenweg 23  
7051 HT Varsseveld, NL  
☎ +31 (0)315 – 25 73 70  
✉ info@vanraam.com  
🌐 www.vanraam.com



Versie 23.03

# Table of contents

Content.....	2
Contact details manufacturer .....	3
Conformity.....	3
Mounting and securing the hood to the bench.....	4
Assembly of the hood.....	6
Disassembly of the hood.....	7

## Content

This user manual provides important and necessary information about the use of the hood of the Rickshaw bike Chat. We ask you to read this manual thoroughly before using the bicycle. Always follow all the instructions given in this manual.

The following actions are discussed in this manual:

- Mounting and securing the hood to the bench
- Assembly of the hood
- Disassembly of the hood



**READ CAREFULLY**

## Contact details manufacturer

Van Raam

Guldenweg 23

7051 HT Varsseveld, The Netherlands

☎ +31 (0)315 – 25 73 70

✉ [info@vanraam.com](mailto:info@vanraam.com)

🌐 [www.vanraam.com](http://www.vanraam.com)

## Conformity

Van Raam declares as manufacturer that the Tandem bicycles, as described in this manual, are produced in accordance with the 93/42/EEG guidelines, risk category 1. All products have been produced in accordance with the 2006/42/EG guidelines. The declaration of conformity can be found on the Van Raam website.

## Mounting and securing the hood to the bench

### **Step 1:**


Insert the bended tubes in the inserts on the bench.



### **Step 2:**

Insert the securing pin in the bottom hole to secure the tube (highest hood position).

For the lowest position of the hood use the highest hole and secure the tube with the securing pin.

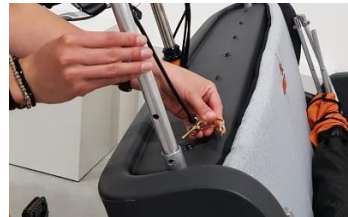

### **Step 3:**

Close the brace of the securing pin.

**Pay Attention!** to your fingers because the brace closes with force.



### **Step 4:**

Place the frame in the bended tubes that have been placed in the bench.




### **Step 5:**

Fold the hood in half on the edge between the foil window and mesh window.



**Step 6:**

Hold the hood with the foil window facing yourself. Attach the hood to the construction using the snap buttons.

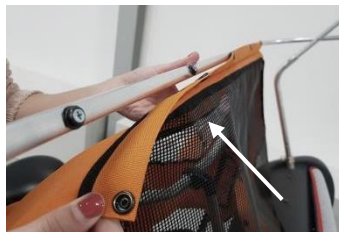

**Step 7:**

Lift the frame and pull the hood over it.



**Step 8:**

Attach the front of the hood by using the snap buttons.




**Step 9:**

Close both zippers on the back of the hood.



**Step 10:**

Attach the snap buttons from the hood to the bench.

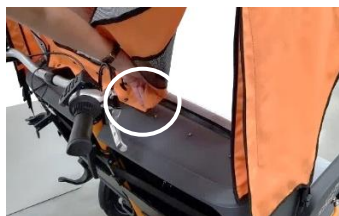

## Assembly of the hood

### **Step 1:**

Remove the elastic cord from the hooks.

### **Step 2:**

Open the buckles and hook the rings around the round knobs.



### **Step 3:**

You should first apply tension to the rear straps of the hood to ensure proper fit. Before applying tension to the strap, the buckle has to be opened. Close the buckle when the strap is under tension.



### **Step 4:**

Repeat this process on the remaining two side straps.

### **Step 5:**

Reattach the elastic cord to the hooks.



### **Step 6:**


The hood is properly assembled if it resembles the image on the right.



## Disassembly of the hood

### **Step 1:**

Open the buckle and release the tension of all four straps and unhook the rings.

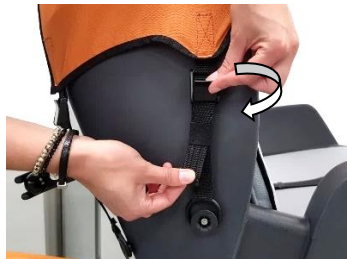


### **Step 2:**

Open the zippers on both sides of the hood.



### **Step 3:**

Detach the snap buttons from the hood and the bench.

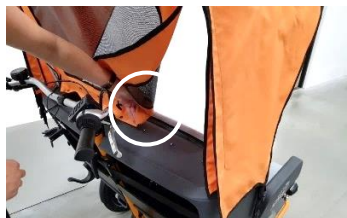

### **Step 4:**

Fold both sides of the hood on the roof.



### **Step 5:**

Push the front and rear of the frame towards each other.



**Step 6:**

Fold the rear of the hood tightly around the folded frame. Fold the rear panel underneath and then over the top. Make sure the rear panel is folded in the correct direction.



**Step 7:**

Pull the elastic cords over the tightly rolled hood. Attach the end of the cords in the loop.



**Step 8:**

Make sure the elastic cord is attached correctly.

**Pay Attention!** to the elastic cord that may snap loose if not properly attached.



**Step 9:**

The rolled hood and frame can be lifted **from the bended tubes**.



**Step 10:**

Place the hood on the two lower hooks that can be found on the rear of the bench.





**Step 11:**

Place the frame in the hooks and fix them with the elastic cords.



**Step 12:**

Remove the securing pin by opening the brace and pulling the pin out of the hole. Make sure to hold the bended tube to prevent the tube from sliding down.

**Pay Attention!** to your fingers. The brace can close with force.



**Step 13:**

The bended tubes can be stored in the rear of the bench.

